

## UPÍNÁNÍ PRO TORNOS

Stroj	Vodící pouzdro	Kleština do vřetene	Kleština do protivřetene	ER kleštiny
ENC16	B238	F20/201	F20/201	ER11 – ER25
ENC16	J6R	F15/580	F20/201	ER11 – ER25
ENC74	J6	F13/357	F13/357	ER11 – ER25
ENC162-164	B238	F20/201	F20/201	ER16 – ER25
ENC162-164	J6R	F15/580	F20/201	ER16 – ER25
ENC167	B238	F30/101	F30/101	ER16 – ER25
ENC167	J6R	F30/101	F30/101	ER16 – ER25
ENC262-264	M1262	F30/101	F30/101	ER16 – ER25
DECO7	J4	F10/86	F20/86	ER11 – ER20
DECO10	J6R	F10/86	F10/86	ER11 – ER20
DECO10	J6R	F13/357	F13/357	ER11 – ER25
DECO13	B238	F13/357	F13/357	ER11 – ER25
DECO13	B238	F15/580	F15/580	ER11 – ER25
DECO13	B238	F16/1076	F16/1076	ER11 – ER25
DECO13	B238	F20/201	F20/201	ER11 – ER25
DECO20	B260	F20/201	F20/201	ER11 – ER25
DECO20	B260	F25/64	F25/64	ER11 – ER25
DECO20	B227	F30/101	F30/101	ER11 – ER25
DECO26	B227	F25/64	F25/64	ER11 – ER25
DECO26	B227	F30/101	F30/101	ER11 – ER25
DECO26	J9	F37/740	F37/740	ER11 – ER25

**technická podpora ☎ +420 774 454 024**

